

## 433Mhz Receiver Configuration

The following steps are **only** necessary when adding new receivers, or if receiver pairing is lost.

### Remote control channel pairing

1. Power down cannon, disconnect battery, and remove the propane tank. Allow cannon to sit for 30min to discharge any remaining gas.
2. Remove receiver activation module cover (Figure 2) by pulling up on the front tab.
3. Ensure the receiver module is connected to the ICM and power cannon on.
4. Press and hold receiver's learning button (Figure 1) until the indicator LED illuminates.



Figure 1



Figure 2

5. Power on transmitter and extend antenna.
6. Press the button corresponding to the desired channel.
7. Flashing indicator LED verifies successful pairing.

### Jumper J1 Settings

Receiver must be powered off before making any changes to jumper J1 (Figure 3)!

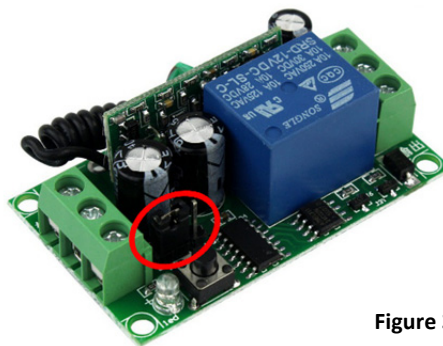


Figure 3

<b>Pins 1-2</b> (default)	<b>Momentary</b>	Button press triggers single activation
<b>Pins 2-3</b>	<b>Toggle</b>	Button press toggles continuous fire on/off
<b>Open</b>	<b>Latch</b>	Button "A" activates continuous fire, button "B" disables (applicable to single channel remote system only)